


# Reminder: Reasons for inaccurate weight of received goods

Sensor protection screw



Sensor protection screw

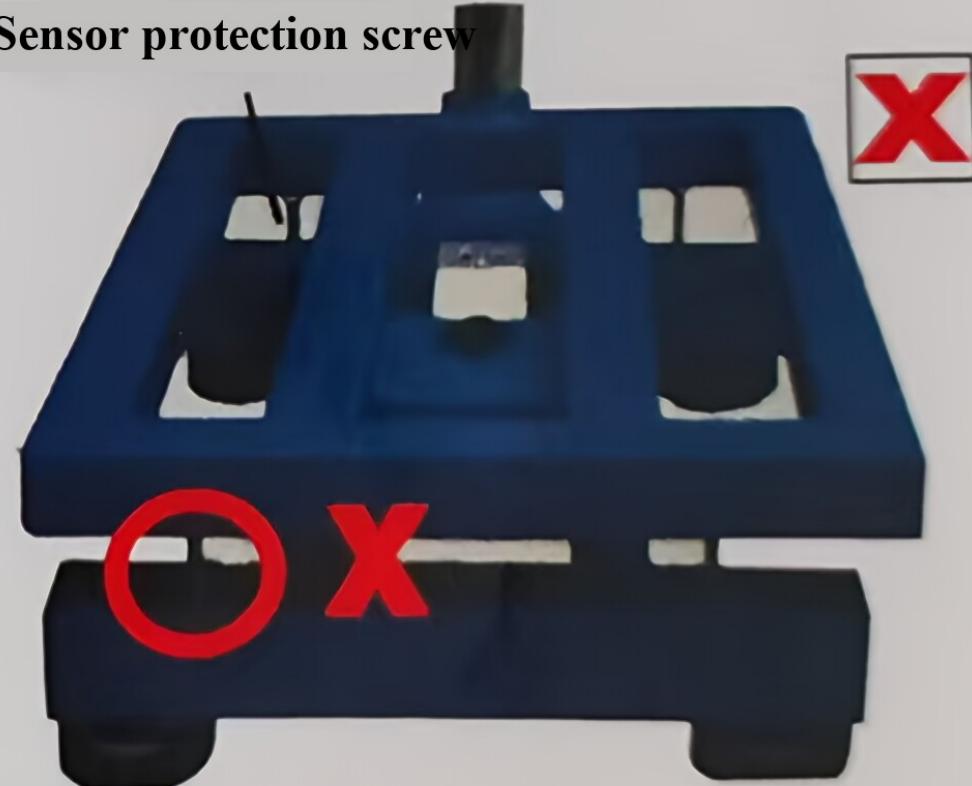

**All four protective screws need to be adjusted down**

## Installation method:

As shown in the figure above, tighten the sensor protection screw to the bottom and do not let it touch the upper layer of the base.

## Incorrect installation method:

To prevent pressure damage to the sensor during transportation, we will tighten the protective screws to the top during shipment. When receiving the goods, please tighten the 4 protective screws to the bottom, so that they do not touch the upper layer of the base.